


### **⚠** CAUTION

- Read all instructions before use.
- Needs to purchase the optional speed sensor if the vehicle does not come with an electrical speed sensor ■ This product is NOT water-proof, but water-resistant. Internal condensation may be found due to a sudden and rapid change of ambient temperature.
- Be sure that VELONA gauges display the right speed before use on public road.
- Disconnect the ground wire from the negative post of vehicle's battery before installation.
- For motorcycles that do not generate electrical speed pulse, use the optional speed sensor(sold separately). Or use a convertor(sold separately) that turns mechanical movement to electrical pulse, if the vehicle comes with a mechanical speedometer cable.
- Designed for a 12 volt system. VELONA gauges does NOT work with a 6 volt system or a battery-less system.
- DO NOT use the positive ground.
- Use VELONA gauges for the intended purpose of use.
- Do NOT disassemble VELONA gauges. It may be damaged and water may come in
- Do NOT leave VELONA gauges under the sunlight when not used.
- Avoid contact with gasoline, brake fluid or other chemicals. It may be damaged.
- Do NOT hit, drop or give a shock on VELONA gauges. It may be damaged due to a precision part
- Rubber mounting is recommended for vehicles with much vibration.
- After installation, check to see if all the parts are correctly installed, and to see if all the screws are properly tightened.
- Periodical inspection of the installed parts is required every 500km(300mile). If anything unusual may be found while driving, stop at a safe place to check.


#### PRODUCT FEATURES

- Stepping motor-driven speedometer
- ■Speed unit (km/h or MPH) selectable
- Odometer (Not Resettable), Range : 0.0-99999.9 km/mile
- Trip Odometer 1 (Resettable), Range: 0.0-99999.9 km/mile
- Trip Odometer 2 (Resettable), Range: 0.0-99999.9 km/mile
- ■Voltmeter, Range : 0-18.0V
- ■Maximum speed memory and recall
- Display LED color selectable from 3 color (White / Blue / Orange)

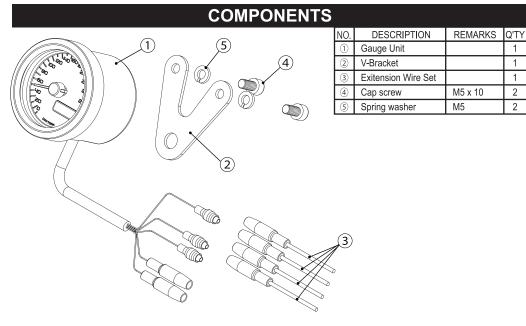


### **INSTALLATION**

- ■The Red wire is to be connected to the wire that gives current when the main switch is turned on
- ■The White wire is to be connected to the wire from the speed sensor.
- Disconnect the ground wire from the negative post of vehicle's battery before installation.

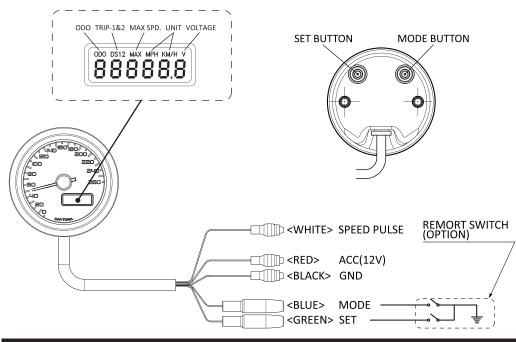


#### **OPTIONAL PARTS**

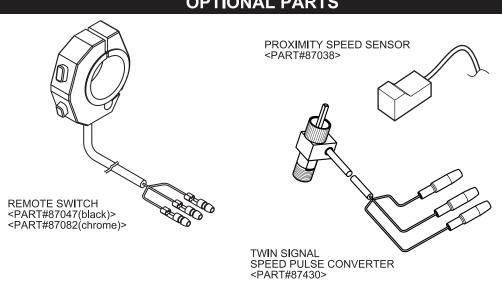


## **VEL** NA

#### **Instruction Manual** DAYTONA

### **NORMAL OPERATION MODE**

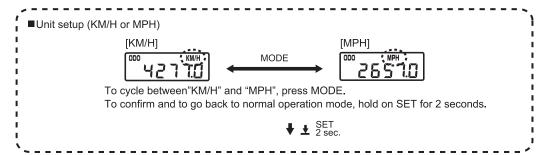

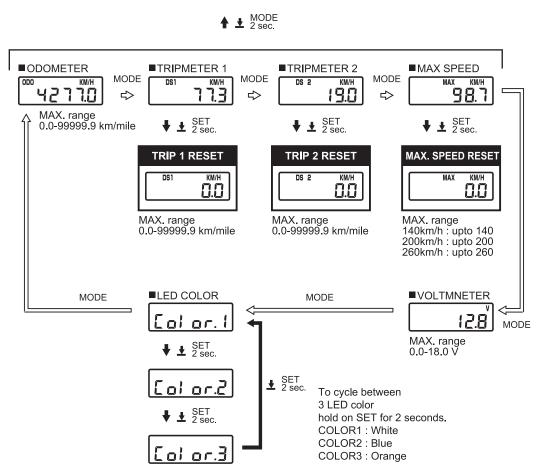

## **SPEED CALIBRATION**

427<u>10</u> At any mode, hold on MODE & SET for 2 seconds.

 MODE+SET
 2sec.
 MODE+SET MODE MODE [AL-5A [AL-NU |[AL-AU  $\Leftrightarrow$ MODE

AUTO CALIBRATION MODE **↓** ± SET 2 sec. 90 When ready to drive, press MODE. 

Drive exactly one km/mile.



Stop and press MODE to conplete the adjustment.

♣ MODE

18 133

To go back to normal operating mode, hold on SET for 2 seconds.

# SPEED ADJUST MODE **↓** ± SET 2 sec.

90

Following the vehicle running at constant speed of 40km/h(MPH)



Press MODE at 40km/h(MPH) to complete the speed adjustment.

♣ MODE

VELONA gauges will start indicating the current spped

The display will autmatically go back to normal operating mode.

MANUAL ADJUST MODE 

00000 ♣ MODE

:00000

Flashing digit is changeable. To modify the number, press SET

<u> (18000)</u>

To fix and go to next digit, press MODE

MODE

18 13:3

To goe back to normal operation mode, hold on SET for 2 seconds.

♣ SET
2 sec.