


# Installation instruction Elektronikbox, Ver. D


## 1. Read Manual




## 2. Required tools

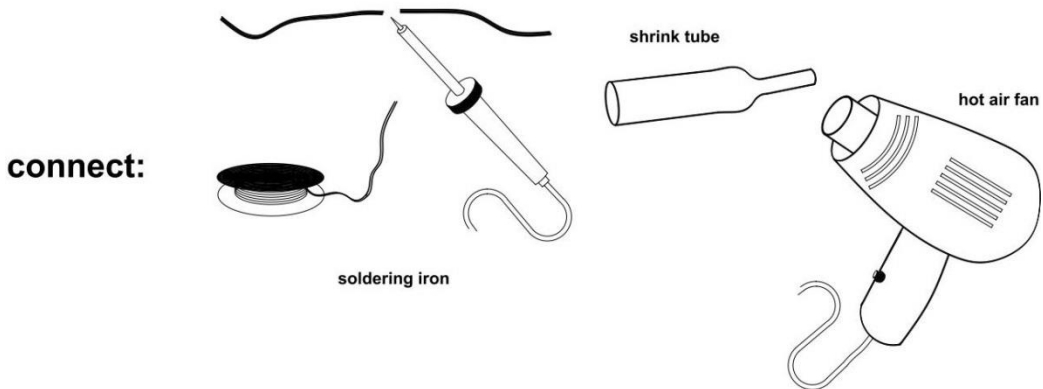


## 3. Connect electrical loads

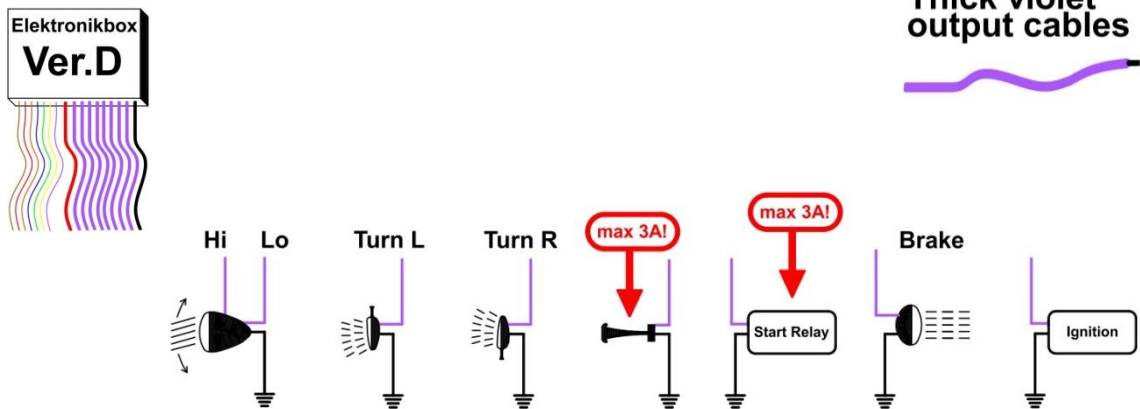


## 4. Connect buttons or switches

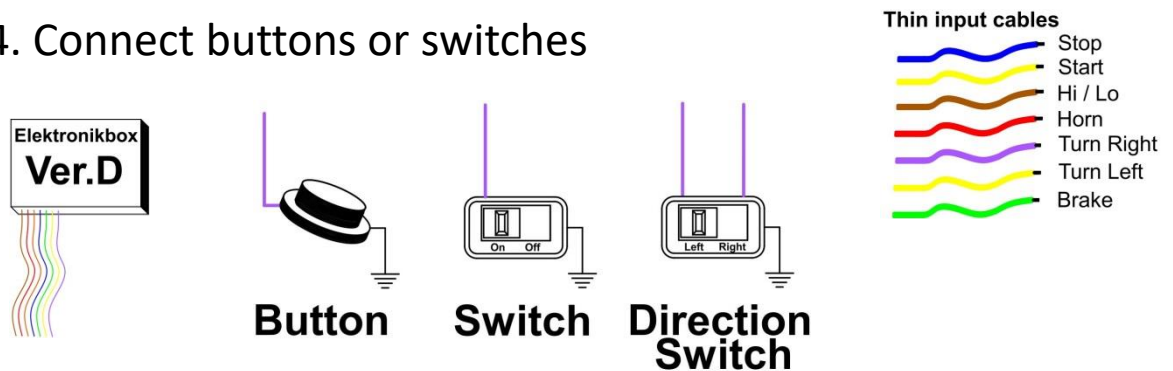

## 5. Connect power

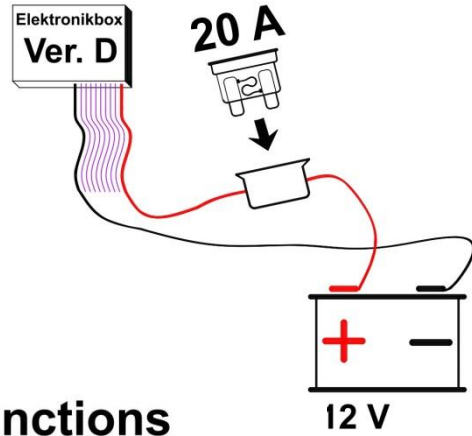

**Check functions**

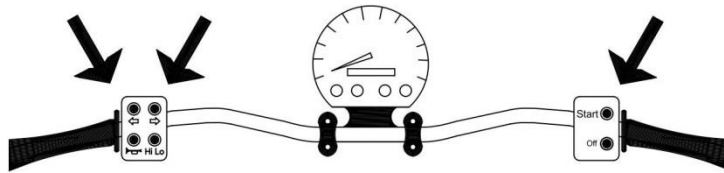

## 6. Program menu

1. Press & hold "Horn" button
2. Ignition
3. Release "Horn" button
4. You're in program Menu!  
See program options in manual.
5. Step through program menu  
by pressing turn-buttons
6. **Important:**  
You must step through all 8 menu items,  
before any selection is saved!

Number of flashes	Mode	Left flasher button	Right flasher button	Description
1 x	Show flasher	Off	On	2 emergency flashes when power on the box
2 x	Flasher auto off	Off	On	The flasher will switch off after 20 or 40 times
3 x	Flasher auto off	20 flashes	40 flashes	Number of repeats when "Flasher Auto" is on
4 x	Low Light	On	Off	The flashers will glim with about 25 % when the flasher function is off
5 x	Brake light mode	Only brake light	Brake light / rear light combination	The rear light will glim with 40 % when the brake light switch is not pressed
6 x	Start / Stop	1 pushbutton	2 pushbuttons	You can use one or two buttons for the start and stop functions
7 x	Headlight - switch or button	Switch	Pushbutton	The box can handle a headlight switch or a push button.
8 x	Flasher control	Switch	Pushbutton	The flasher can controlled by push button or by a switch