


SHAD

BMW F650GS '08 / F800GS '08 / F700GS '15 F800GS AVVENTURE '16

KIT TOP W0FG68ST



1 261169 x1



2 260417 x2
Ø16 Ø9 x 16



3 303020 x2
Ø8



4 304069 x2
M8 x 55 DIN 7380



5 261168 x2
Ø16 Ø9 x 29
Ø12 x 5



6 304032 x2
M8 x 50 DIN 7991



7 260523 x2
Ø16 Ø9 x 25



8 303025 x2
Ø10

! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.




I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

F650GS '08 / F800GS '08 / F700GS '15

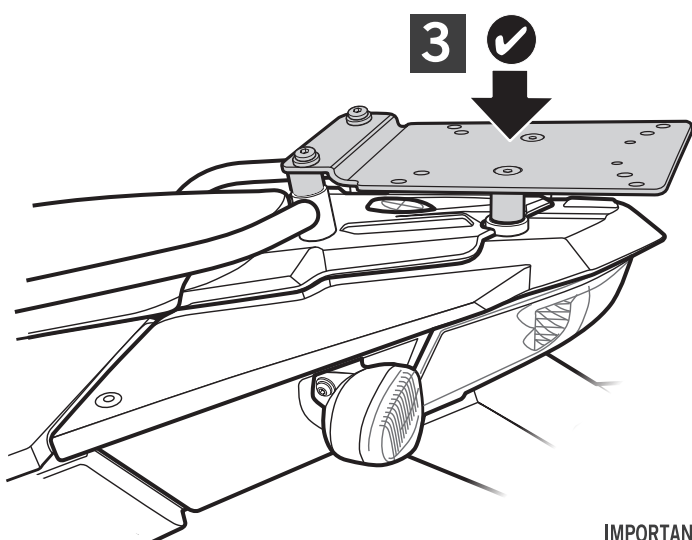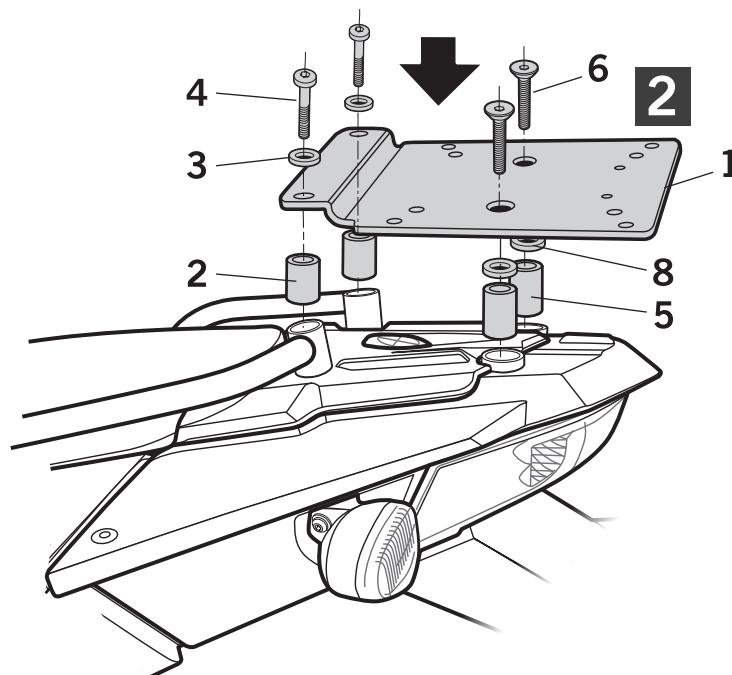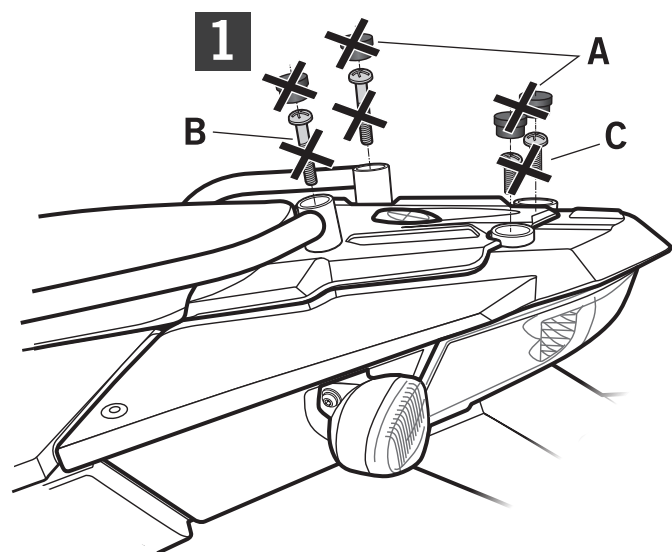

F800GS AVVENTURE '16

