


# SHAD

## YAMAHA MT 09 '13 KIT TOP YOMT93ST

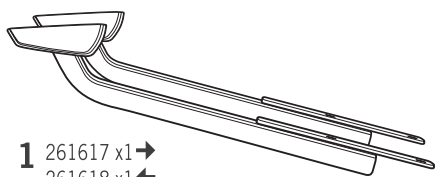

1 261617 x1 →  
261618 x1 ←



2 260852 x4  
Ø17 Ø11 x 10



3 303045 x4  
Ø8



4 304053 x4  
M8 x 30 DIN 7380



5 304081 x4  
M8 x 20 Din 7380



6 303018 x4  
Ø8

### ! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

